




Nose Cone

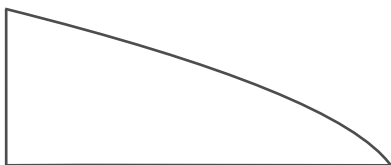


Nose Cone

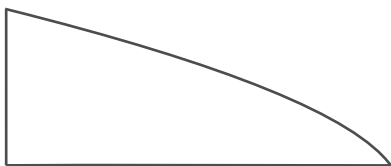

Nose Cone

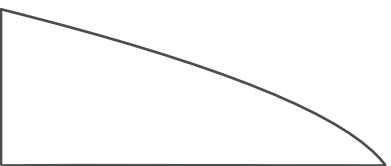


Nose Cone

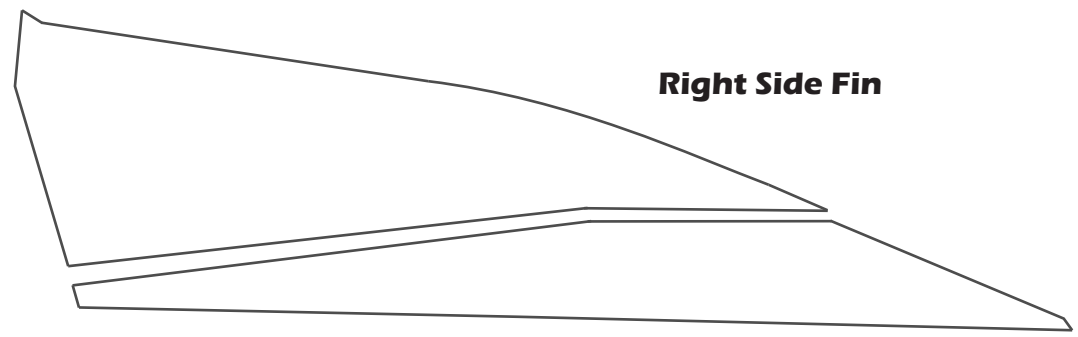


Right Side Fin


Right Side Cockpit Side

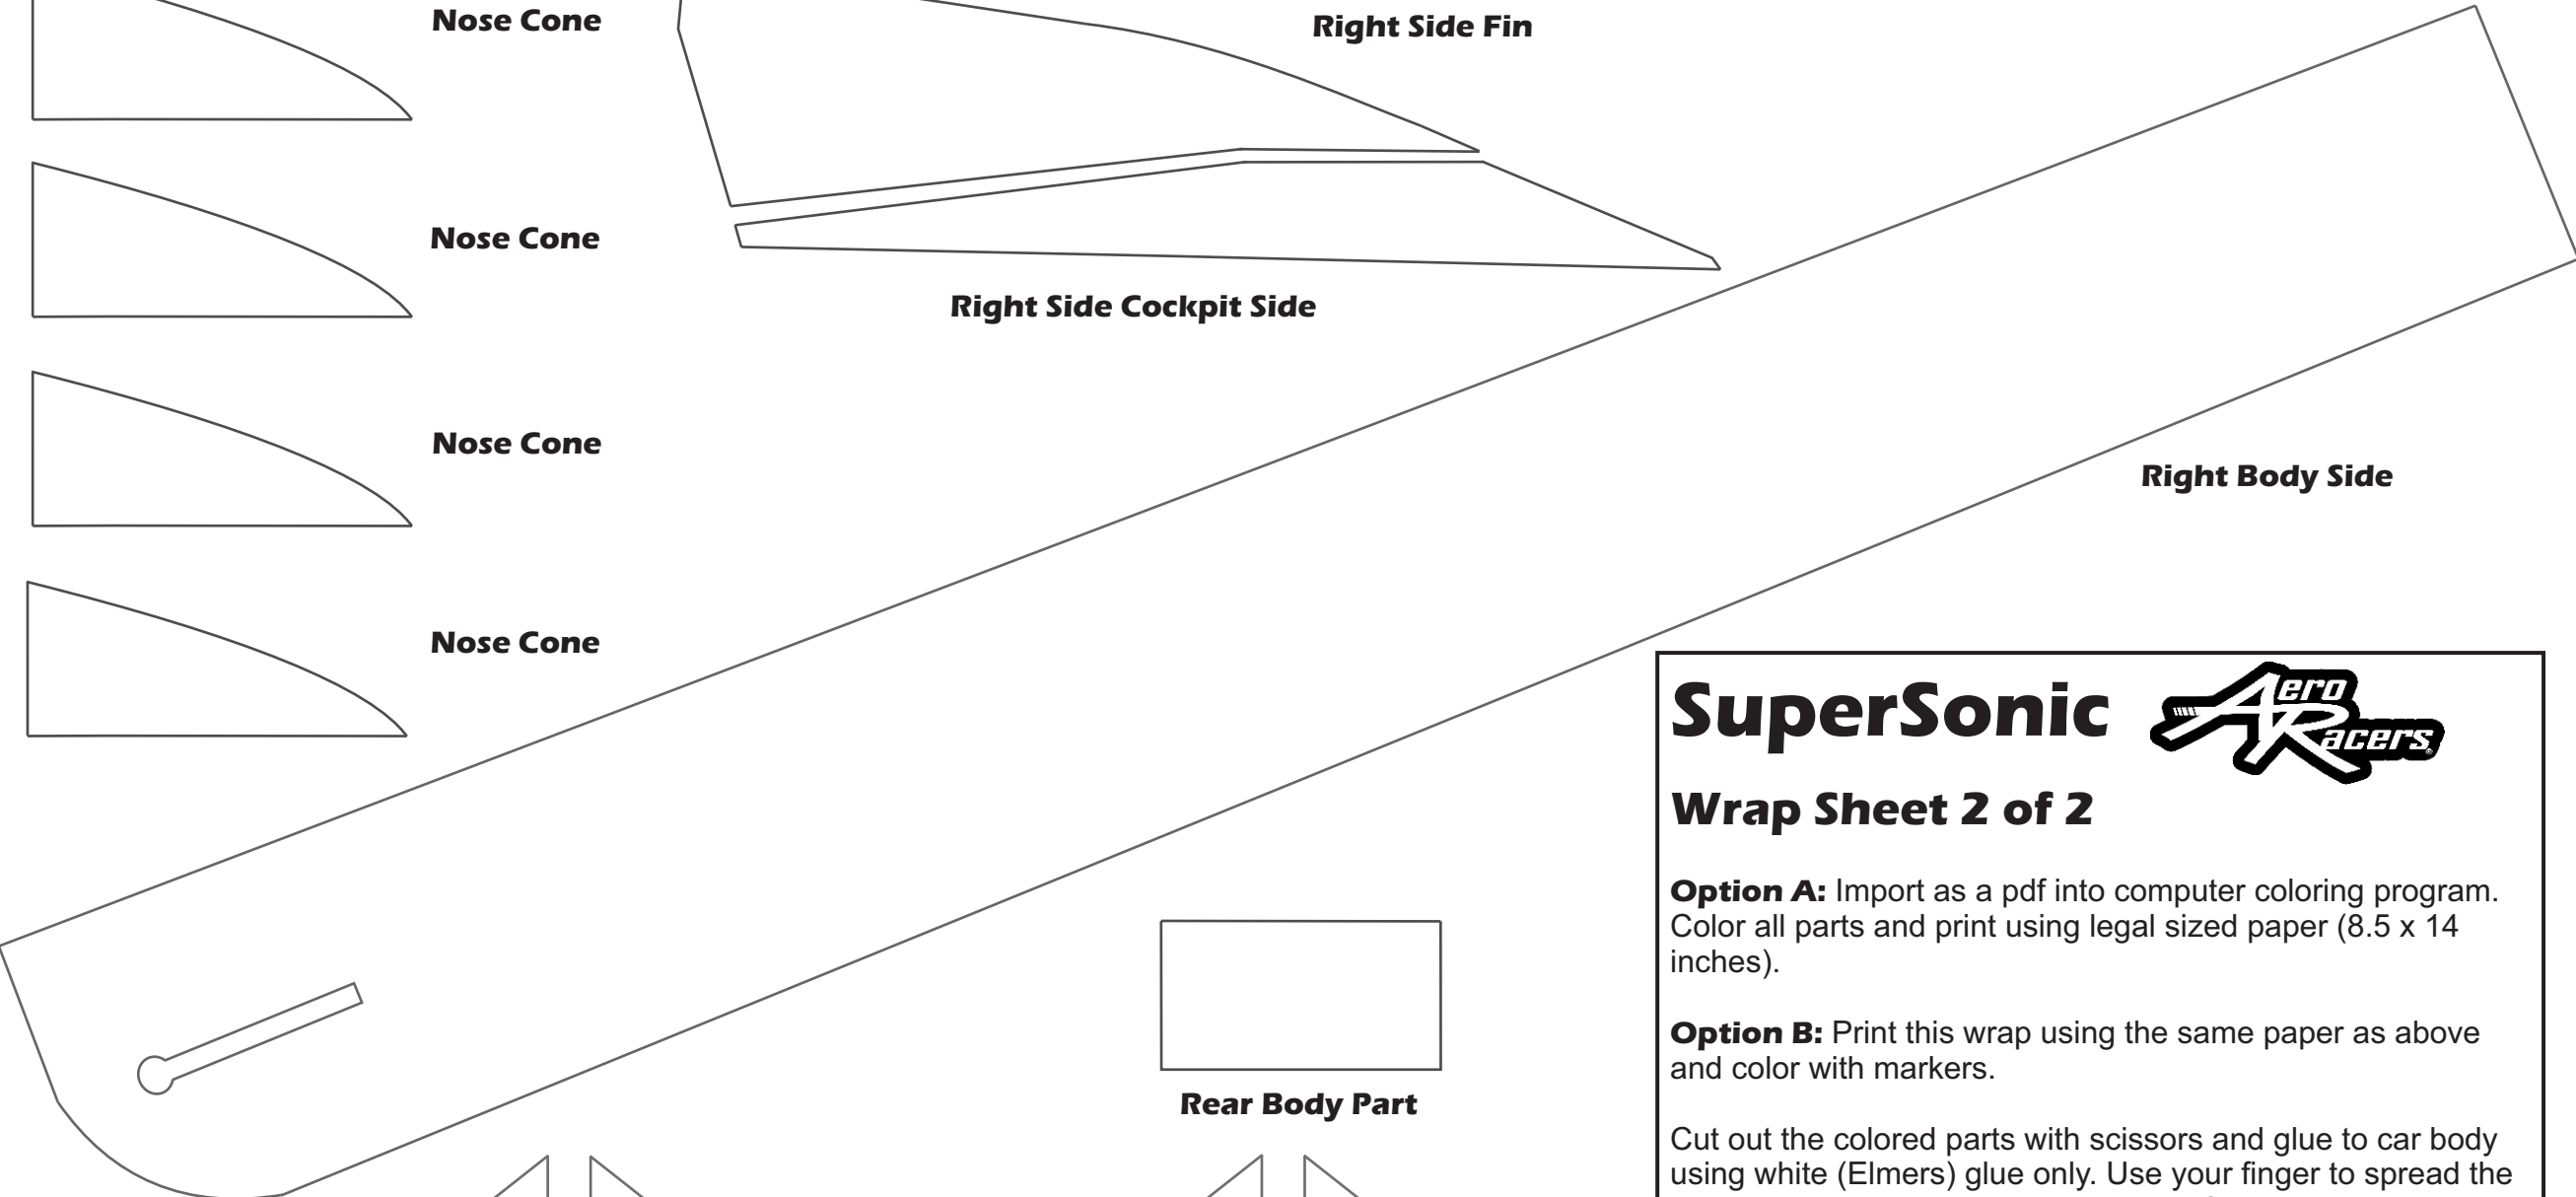


Right Body Side

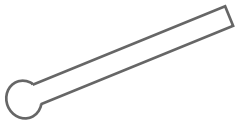

Rear Body Part

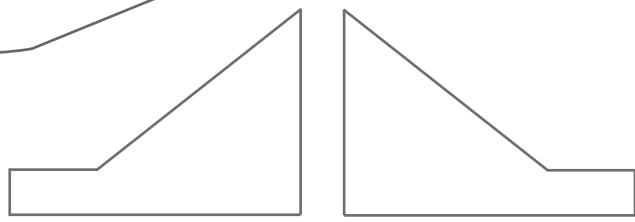

Axle Fairing Part Top L/R

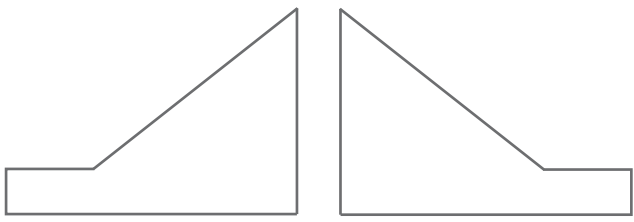

Axle Fairing Part Bottom L/R

SuperSonic



Wrap Sheet 2 of 2

Option A: Import as a pdf into computer coloring program. Color all parts and print using legal sized paper (8.5 x 14 inches).

Option B: Print this wrap using the same paper as above and color with markers.

Cut out the colored parts with scissors and glue to car body using white (Elmers) glue only. Use your finger to spread the glue evenly over the whole backside of the wrap to be glued. Glue both the right and left body sides on first and fold over at the top. Once both body sides are in position, add the top body part(s).