




Left body side

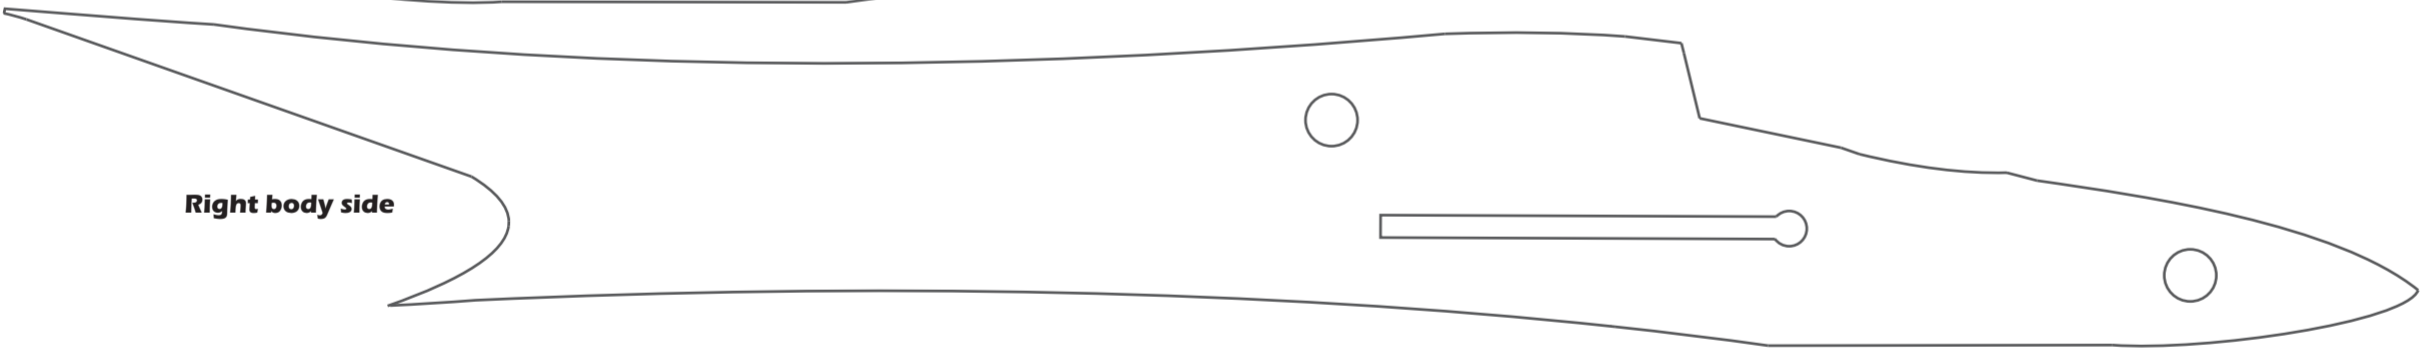


Right body side

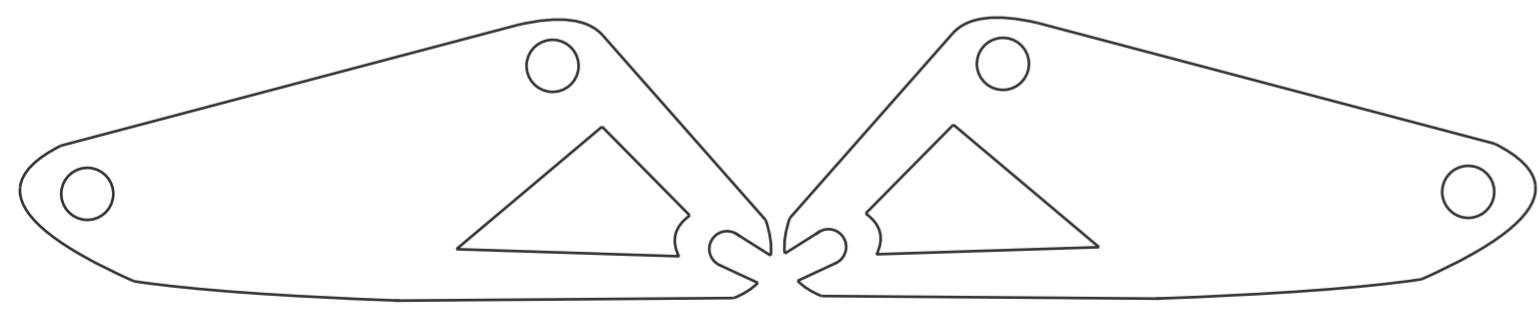


Rear suspension side covers

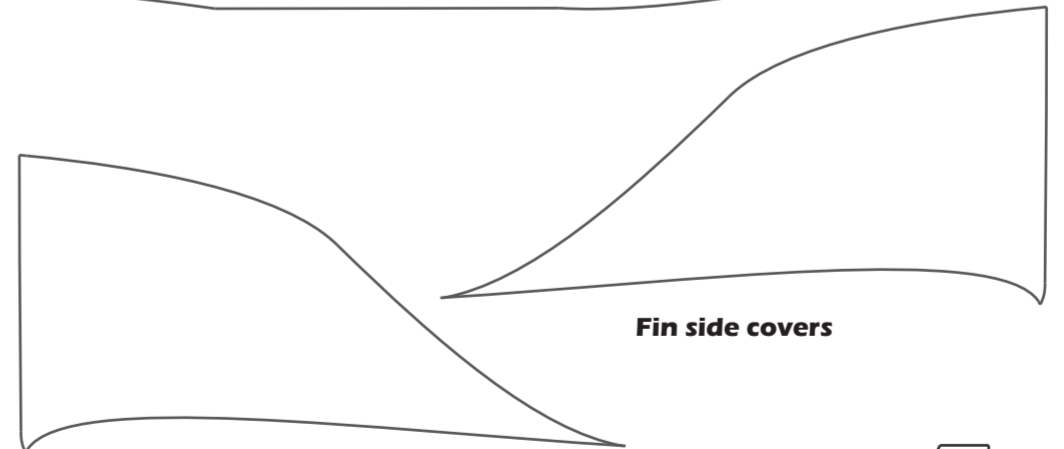

Fin side covers

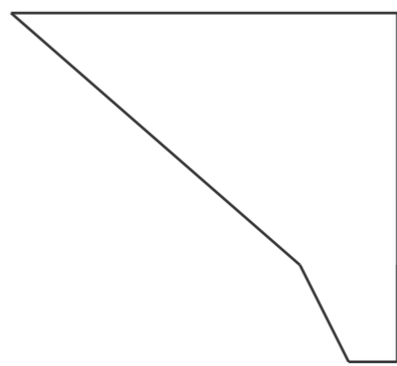

Front suspension top covers

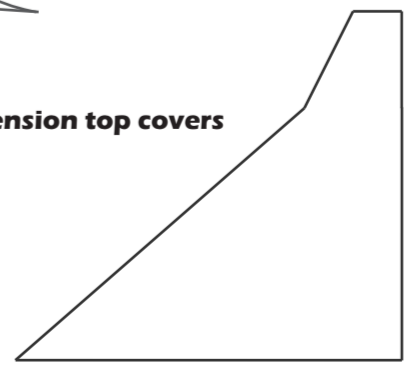

P1 Sonic Master Wrap Layout Sheet

Go to aeroracers.com to find out how to use this master wrap layout sheet.



© 2017 AeroRacers Inc.
All Rights Reserved.

Start by coloring the parts in your computer using software like Correlldraw or similar. Print out the wrap on a legal sized sheet of paper. Cut out the parts with scissors. Apply white or Elmers glue to the backside of the parts and glue them to the body parts before using the snap rivets. Once the wrap is dry, use scissors to puncture a hole through the wrap where the rivet holes are located. Also cut a slot where the front suspension part goes through the car body.